

FEATURES

- **PROTECTION MODE:** II 1 G Ex ia IIC T6,T5,T4 Ga certified in according to the Directive ATEX 94/9/EC
- **Applicable in zones with explosion risk (ZONE 0)**
- **Configurable input for RTD, mV, Tc, Resistance and Potentiometer**
- **4 ÷ 20 mA configurable output on current loop**
- **Configurable by Personal Computer, on-field reconfigurable**
- **High accuracy**
- **EMC compliant – CE mark**
- **Suitable for DIN rail mounting in compliance with EN-50022 and EN50035**



Intrinsically safe two wire transmitter DAT 2015 IS DAT 2015 IS / HT



GENERAL DESCRIPTION

The isolated transmitter DAT 2015 IS is able to execute many functions such as : measure and linearisation of the temperature characteristic of RTDs sensors, conversion of a linear resistance variation, conversion of a voltage signal even coming from a potentiometer connected on its input. Moreover the DAT 2015 IS is able to measure and linearise the standard thermocouples with internal cold junction compensation. The measured values are converted in a 4÷20 mA current signal . The device guarantees high accuracy and performances stability both in time and in temperature.

The programming of the DAT 2015 IS is made by a Personal Computer using the software PROSOFT, developed by DATEXEL, that runs under the operative system "Windows™". By use of PROSOFT, it is possible to configure the transmitter to interface it with the most used sensors .

In case of sensors with a no-standard output characteristic, it is possible to execute, via software, a "Custom" linearisation (per step) to obtain an output linearised signal. For Resistance and RTDs sensors it is possible to program the cable compensation with 3 or 4 wires; for Thermocouples it is possible to program the Cold Junction Compensation (CJC) as internal or external.

It is possible to set the minimum and maximum values of input and output ranges in any point of the scale, keeping the minimum span shown in the table below. Moreover it is available the option of alarm for signal interruption (burn-out) that allows to set the output value as high or low out of scale .

The DAT 2015 IS is in compliance with the Directive 2004/108/EC on the Electromagnetic Compatibility. It is housed in a plastic enclosure of 12.5 mm thickness suitable for DIN rail mounting in compliance with EN-50022 and EN-50035 standards.

USER INSTRUCTIONS.

The 4÷20 mA output signal is measurable in the power loop as shown in the section "Output/Power supply connections"; Rload is the input impedance of instruments on the current loop; to obtain a correct measure, the value of Rload will be calculated as function of the power supply value (see section "Technical specification – Load characteristic").

The input connections must be made as shown in the section "Input connections".

To configure, calibrate and install the transmitter refer to sections " DAT 2015 IS: configuration and calibration" and "Installation Instructions".


- In order to guarantee a correct and safe operation of the transmitter the following requirements must be strictly satisfied
- 1) **The power supply voltage (intrinsically safe) applied between the terminals M and N must be included between 11 V and 30 Vdc values.**
 - 2) **The maximum power supplied by the safety barrier must be not higher than 0.75 W.**

Ex Data

Output / supply	Input
$U_i = 30\text{ V}$ $I_i = 100\text{ mA}$ $P_i = 0.75\text{ W}$ $L_i = 0.1\text{ mH}$ $C_i = 10\text{ nF}$	$U_o = 6.2\text{ V}$ $I_o = 100\text{ mA}$ $P_o = 500\text{ mW}$ $L_o = 3.6\text{ mH}$ $C_o = 5\text{ uF}$
T6 : -20 ÷ +55°C T5 : -20 ÷ +70°C T4 : -20 ÷ +85°C ('HT' vers.)	

TECHNICAL SPECIFICATIONS (Typical at 25 °C and in nominal conditions)

Input type	Min	Max	Min. span	Input calibration (1)	Response time (10÷ 90%)
TC(*) CJC int./ext.				RTD > of $\pm 0.1\%$ f.s. or $\pm 0.2^\circ\text{C}$	about 400 ms
J	-200°C	1200°C	2 mV	Low res. > of $\pm 0.1\%$ f.s. or $\pm 0.15\ \Omega$	Power supply
K	-200°C	1370°C	2 mV	High res. > of $\pm 0.2\%$ f.s. or $\pm 1\ \Omega$	Power supply voltage 11 .. 30 Vdc
S	-50°C	1760°C	2 mV	mV, Tc > of $\pm 0.1\%$ f.s. or $\pm 18\ \mu\text{V}$	Reverse polarity protection 60 Vdc max
R	-50°C	1760°C	2 mV	Output calibration	Load characteristic - Rload (maximum load value on current loop per power supply value)
B	400°C	1820°C	2 mV	Current $\pm 7\ \mu\text{A}$	
E	-200°C	1000°C	2 mV	Input impedance	
T	-200°C	400°C	2 mV	mV, Tc $\geq 10\ \text{M}\Omega$	
N	-200°C	1300°C	2 mV	Linearity (1)	
RTD(*) 2,3,4 wires				Tc $\pm 0.2\%$ f.s.	
Pt100	-200°C	850°C	50°C	RTD $\pm 0.1\%$ f.s.	
Pt1000	-200°C	200°C	50°C	Line resistance influence	
Ni100	-60°C	180°C	50°C	mV, Tc $\leq 0.8\ \mu\text{V}/\Omega$	
Ni1000	-60°C	150°C	50°C	RTD 3 wires 0.05%/Ω (50 Ω balanced max.)	
Voltage				RTD 4 wires 0.005%/Ω (100 Ω balanced max.)	
mV	-100mV	+700mV	2 mV	RTD excitation current	
Potentiometer				Typical 0.350 mA	
(Nominal value)	0 Ω	200 Ω	10%	CJC comp.	
	200 Ω	500 Ω	10%	$\pm 0.5^\circ\text{C}$	
	0.5 KΩ	2 KΩ	10%	Thermal drift (1)	
RES. 2,3,4 wires				Full scale $\pm 0.01\%$ / °C	
Low	0 Ω	300 Ω	10 Ω	CJC $\pm 0.01\%$ / °C	
High	0 Ω	2000 Ω	200 Ω	Burn-out values	
Output type	Min	Max	Min. span	Max. value about 22.5 mA	
Direct current	4 mA	20 mA	4 mA	Min. value about 3.6 mA	
Reverse current	20 mA	4 mA	4 mA	(1) referred to input Span (difference between max. and min. values)	

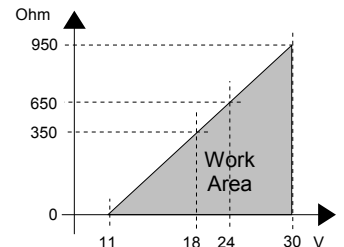

Temperature & humidity	
Operative temperature	-20°C .. +70°C
'HT' vers: -20°C .. +85°C	
Storage temperature	-40°C .. +85°C
Humidity (not condensed)	0 .. 90 %
Housing	
Material	Self-extinguish plastic
Mounting	DIN rail in compliance with EN-50022 and EN-50035
Weight	about 90 g.
EMC (for industrial environments)	
Immunity	EN 61000-6-2
Emission	EN 61000-6-4

(*) For temperature sensors it is possible to set the input range also in F degrees; to made the conversion use the formula: °F = (°C*9/5)+32)

DAT 2015 IS: CONFIGURATION AND CALIBRATION

Warning: during these operations the device must always be powered by a safety barrier; to connect the interface Prodat, use the protection cable CVPR-03.

- CONFIGURATION


- 1) Power-on the DAT 2015 IS by a safety barrier (see Ex data).
- 2) Remove the protection plastic cap on DAT 2015 IS.
- 3) Connect the interface PRODAT to the Personal Computer and to device. using the protection cable CVPR-03. (see section "DAT 2015 IS: PROGRAMMING").
- 4) Run the software PROSOFT.
- 5) Set the parameters of configuration.
- 6) Program the device.

- CALIBRATION CONTROL


With software PROSOFT running:

- 1) Connect on the input a calibrator setted with minimum and maximum values referred to the electric signal or to the temperature sensor to measure.
- 2) Set the calibrator at the minimum value.
- 3) Verify that the DAT 2015 IS provides on output the minimum setted value.
- 4) Set the calibrator at the maximum value.
- 5) Verify that the DAT 2015 IS provides on output the maximum setted value.
- 6) In case of regulation of value obtained in the step 3 and 5, use the ZERO and SPAN regulators of software PROSOFT. The variation introduced from these regulators must be calculated as percentage of the input range.
- 7) Program the device with the new parameters.

DAT 2015 IS: PROGRAMMING

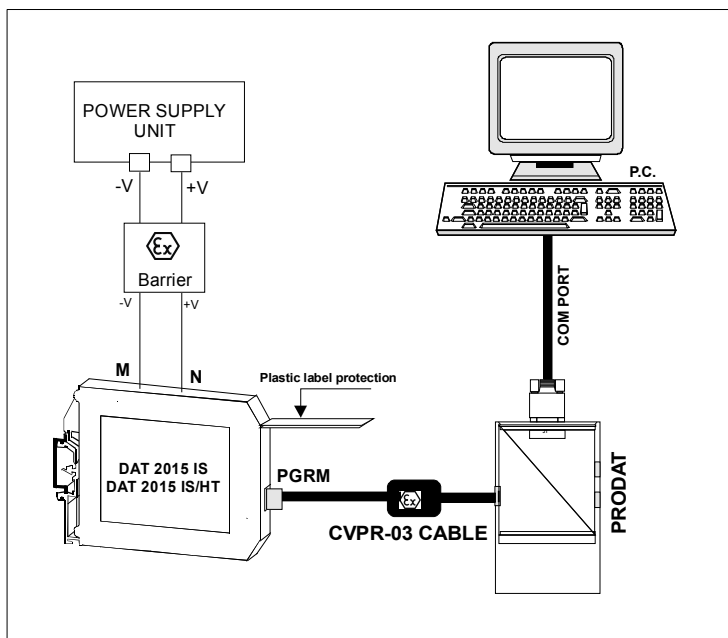

DIMENSIONS (mm) & CONNECTOR PGRM

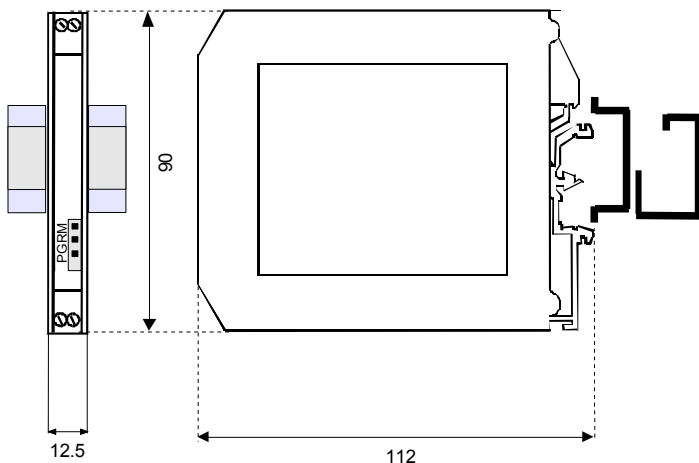

INSTALLATION INSTRUCTIONS

In order to guarantee the safety requirements, before to install the device, refer to the "Safety Instructions" provided with the device.

The transmitter must be mounted in order to guarantee to it an IP54 protection grade or more for external environments and an IP4X protection grade or more for internal environments or protected area.

The device DAT 2015 IS is suitable for DIN rail mounting.

It is necessary to install the device in a place without vibrations; avoid to routing conductors near power signal cables.

It is necessary to install the device in a place without vibrations; avoid to routing conductors near power signal cables.

The protection enclosure type for DAT 2015 IS must be selected according to the installation Zone:


- **Zone 0:** enclosure exclusively in stainless;

- **Zone 1 or 2:** enclosure in aluminium or plastic; if plastic, apply on the enclosure the following warning:


"Electrostatic discharge: Clean only with a damp cloth or anti-static products."

DAT 2015 IS: CONNECTIONS

INPUT CONNECTIONS

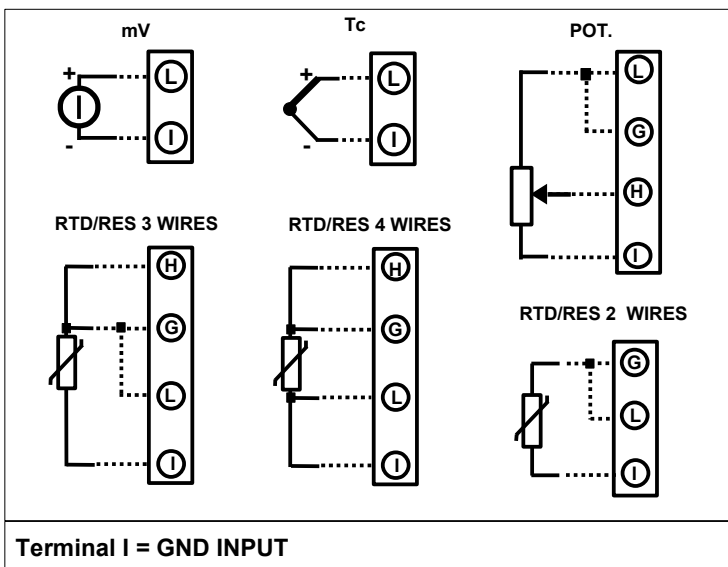

OUTPUT/POWER SUPPLY CONNECTIONS

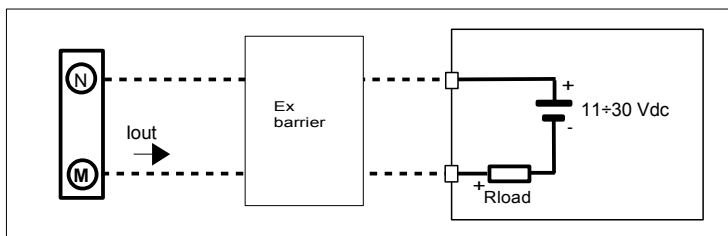

HOW TO ORDER

The DAT 2015 IS is provided as requested on the Customer's order. Refer to the section "Technical specification" to determine input and output ranges. In case of the configuration is not specified, the parameters must be set by the user.

ORDER CODE EXAMPLE:

